

# Controller WiFi function

## 1. App download and installation


Scan the QR code below with a browser (both Android and Apple systems are acceptable)

Smart Life

Tuya Smart



- Take Apple system users using Smart Life as an example

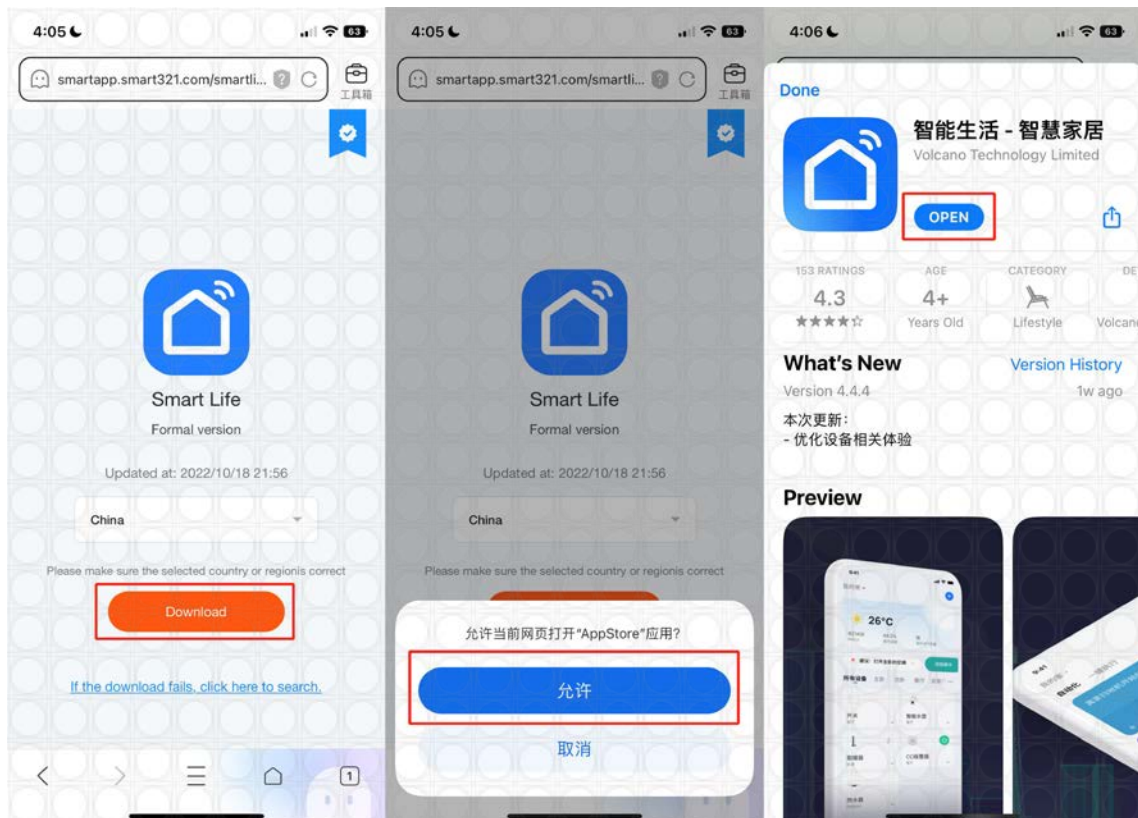


**2. Start the software:** After the installation is complete, click the desktop "🏠" or "📺" icon to start the App.

### 3. APP registration

Users without an account can click "**Register**" on the login page to apply.


- ① Log in with Password →
- ② Click to register →
- ③ Enter mobile phone number or email →
- ④ Enter verification code →
- ⑤ Set password → done.

As shown in the following sequence:

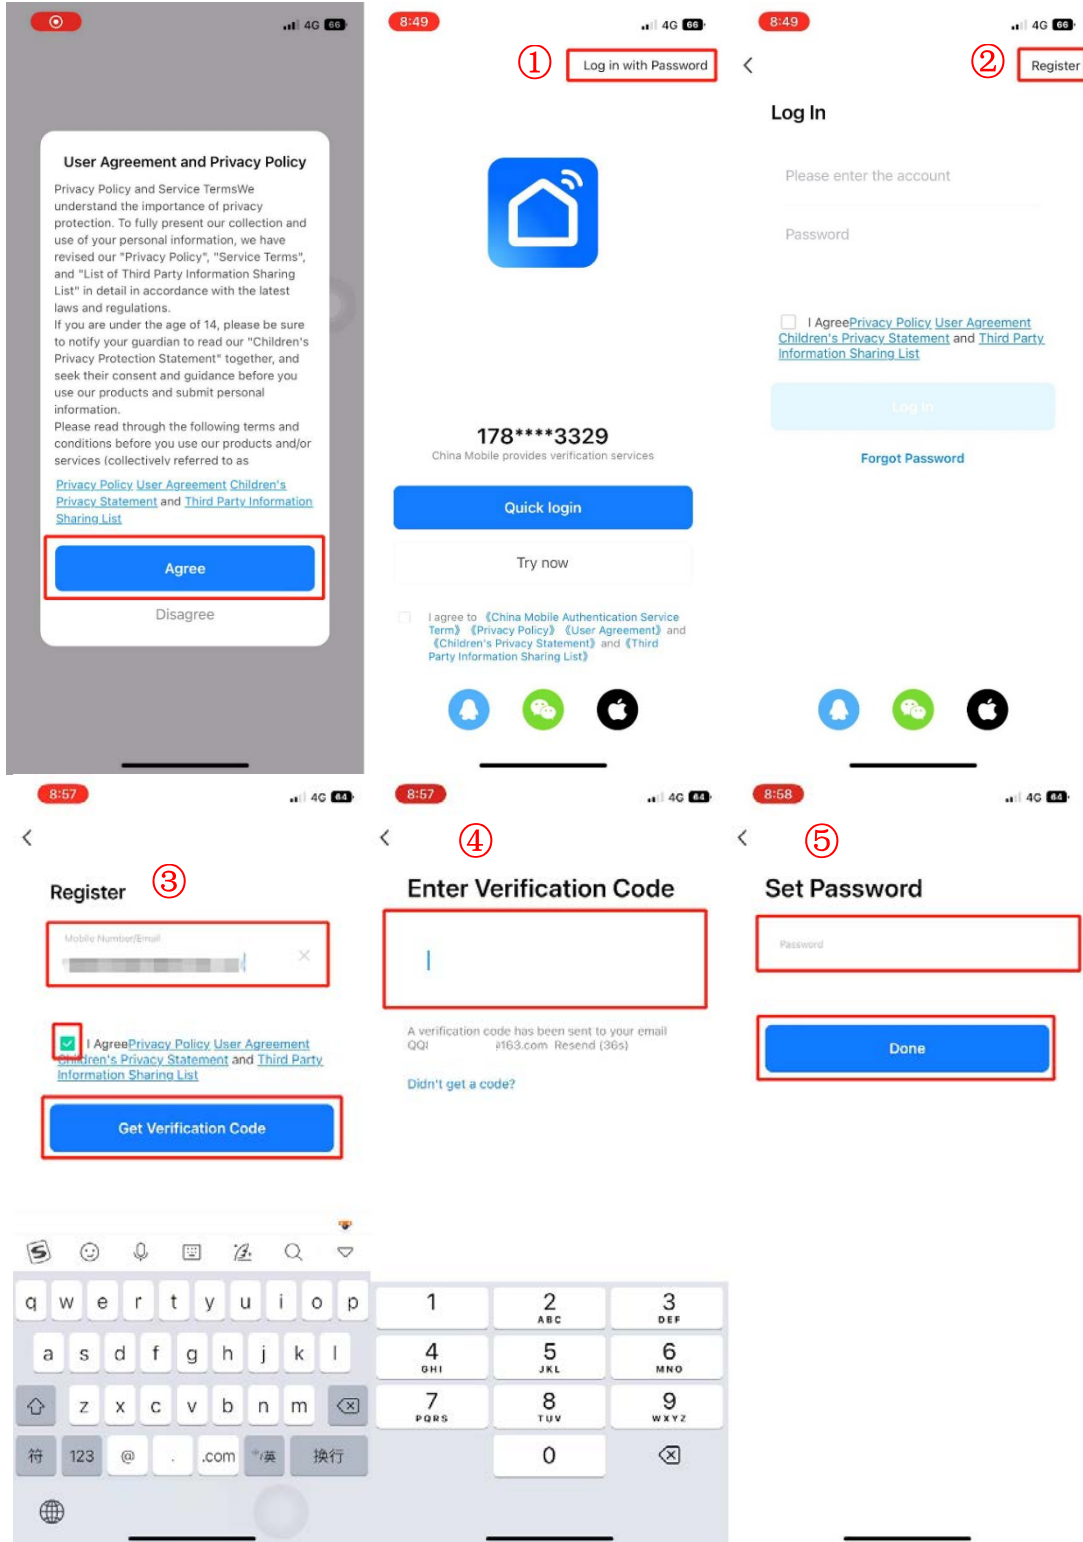

## 4. Login

- ① Log in with Password → ② Enter account number and password to log in → ③ Enter the APP main interface

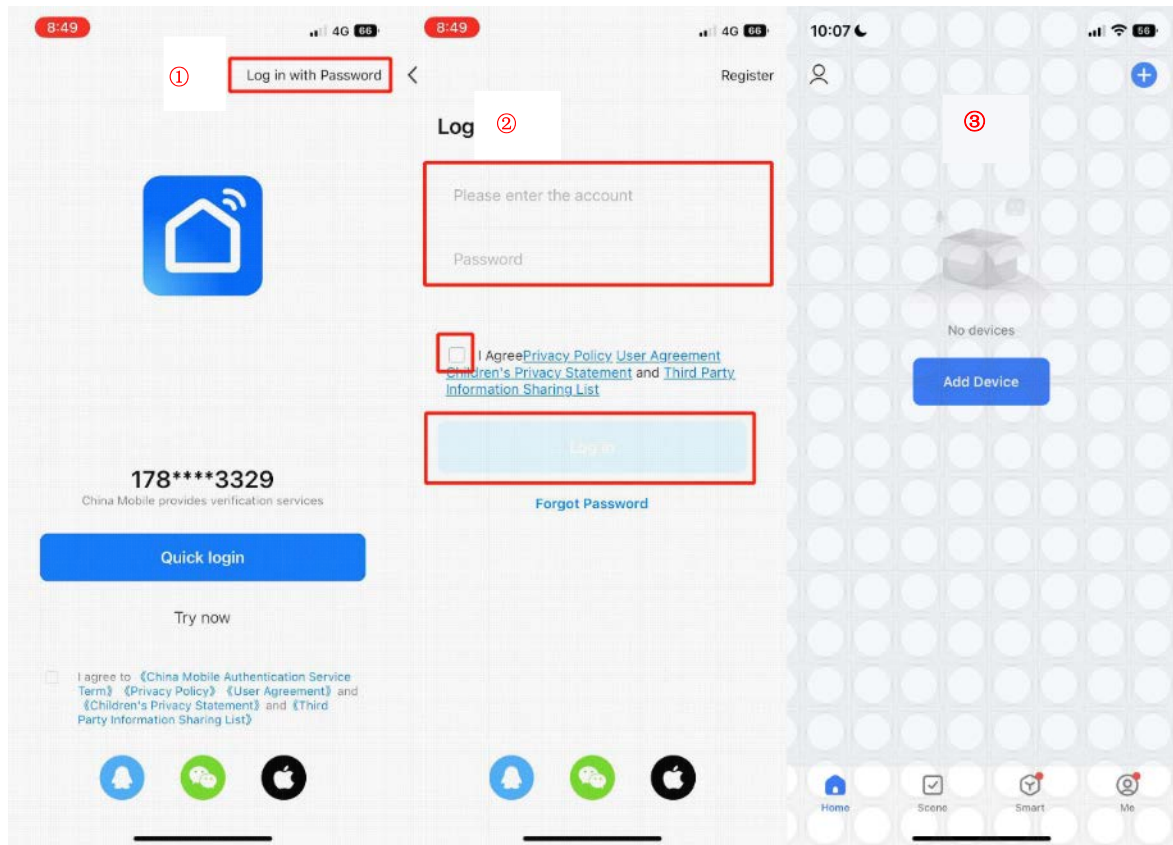

## 5. WIFI module configuration steps


There are 2 connection methods for WIFI module configuration: ① intelligent distribution network connection, ② manual AP distribution network connection

### 5.1. Method 1: Intelligent Network Distribution Mode

5.1.1. Open the "Smart Life" APP, log in and enter the home page.

5.1.2. Click "+" in the upper right corner or "Add Device" on the interface to enter the device type selection.

5.1.3. Select "Smart Heat Pump (Bluetooth+ Wi-Fi)" in the "Large Home Appliances" device to enter the interface for adding devices.

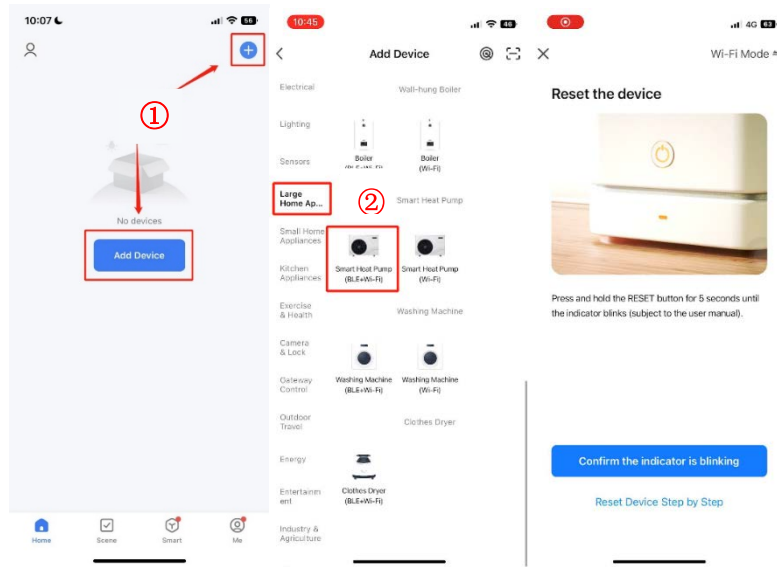


### 5.1.4. set controller

In the bright screen state, click the "🏠" button to enter the function selection page.


Click "Wifi Distribution" to enter the WIFI operation interface.


Click "Intelligent Distribution Network" to enter the distribution mode.



5.1.5. After the “

Enter the WIFI selection interface, select WIFI according to the requirements, click Next, and the page will automatically jump to the interface to start connecting the device, find the device → register to the cloud → device initialization done.

Click “Done” to enter the main interface of device operation directly. (The device name can be changed in this interface  )

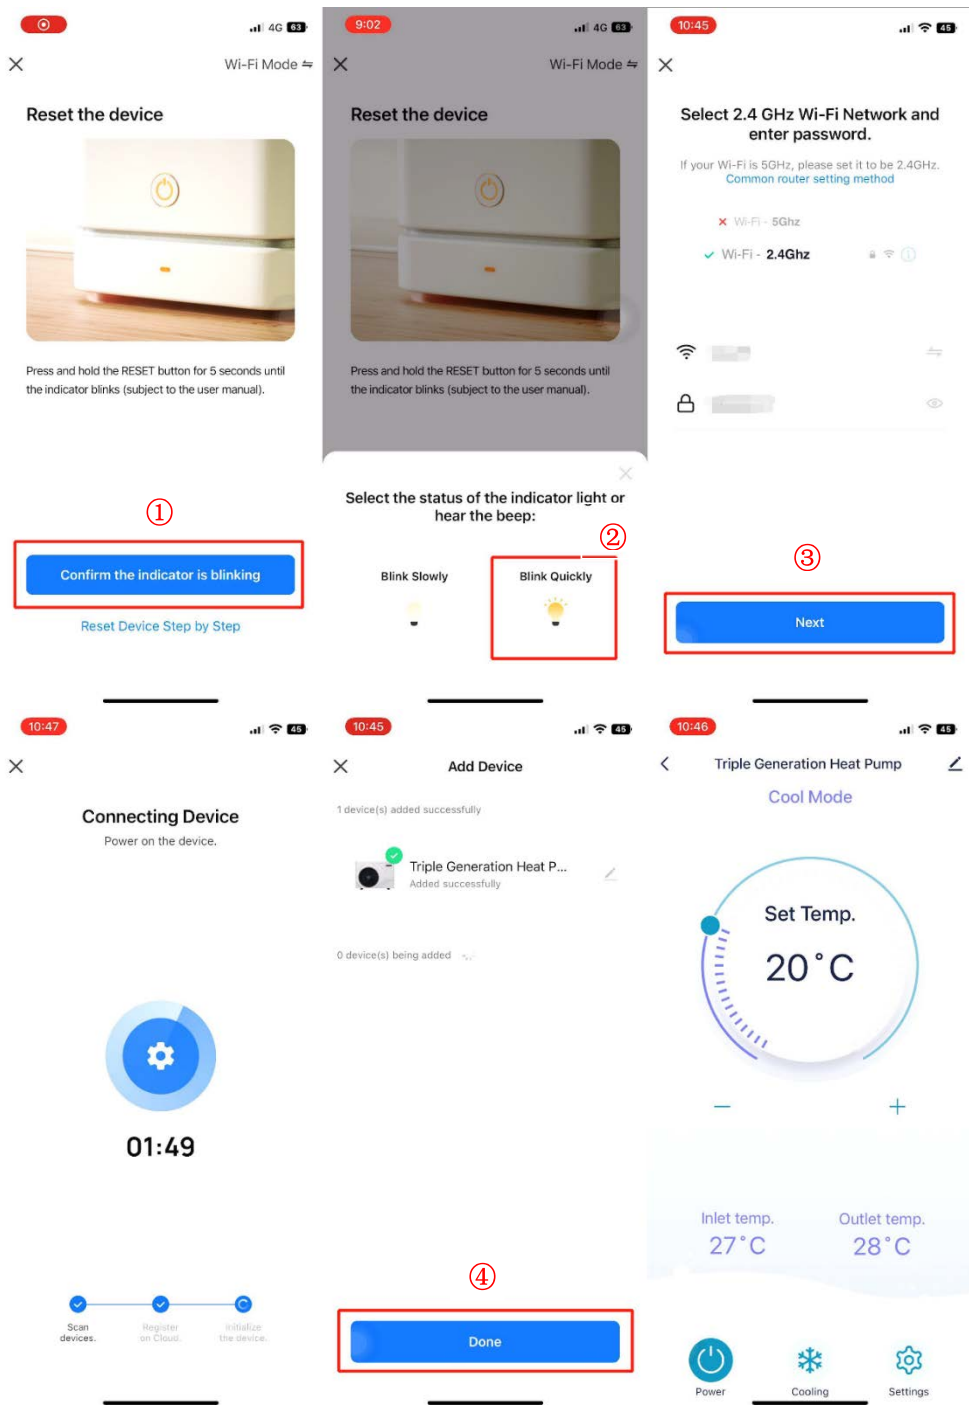

5.1.6. When the machine is connected to WIFI successfully, "WiFi" is always on.




## 5.2. Method 2: Manual AP distribution network mode

5.1.1. Open the "Smart Life" APP, log in and enter the home page.

5.1.2. Click "+" in the upper right corner or "Add Device" on the interface to enter the device type selection.

5.1.3. Select "Smart Heat Pump (Bluetooth+ Wi-Fi)" in the "Large Home Appliances" device to enter the interface for adding devices.

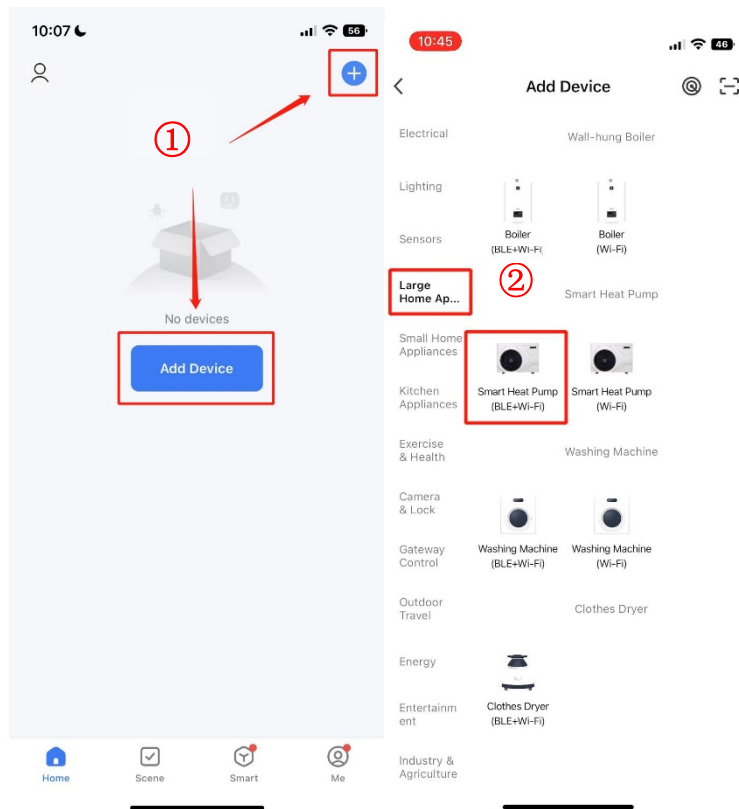


#### 5.1.4. set controller

In the bright screen state, click the "🏠" button to enter the function selection page.

Click "**Wifi Distribution**" to enter the WIFI operation interface.

Click "**Ap Distribution Network**" to enter the distribution mode.

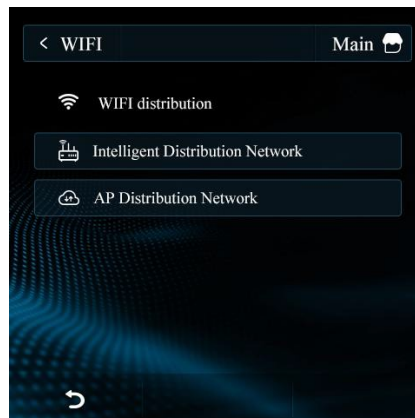



5.1.5. After the "📶" icon on the wire controller is in slow flashing state, click "**Confirm the indicator is blinking**" in APP. Select "**Blink slowing**" on the status of the indicator light or when you hear the prompt sound interface. (as shown in the figure below).

Enter the WiFi selection interface, select WiFi according to the requirements and click Next.


Connect the WiFi of the mobile phone to the hotspot of the device (as shown in the figure below), click to connect on the APP page, the page will automatically jump to the mobile phone setting page, and open the wireless LAN selection interface.

Connect to the Smart Life-XXX network, as shown in the figure: Smart Life-XXX, after the connection is successful, return to the "Smart Life" APP, and the APP will automatically enter the device connection state, find the device → register to the cloud → device initialization finished.

Click "Done" to enter the main interface of device operation directly. (The device name can be changed in this interface ↙ )

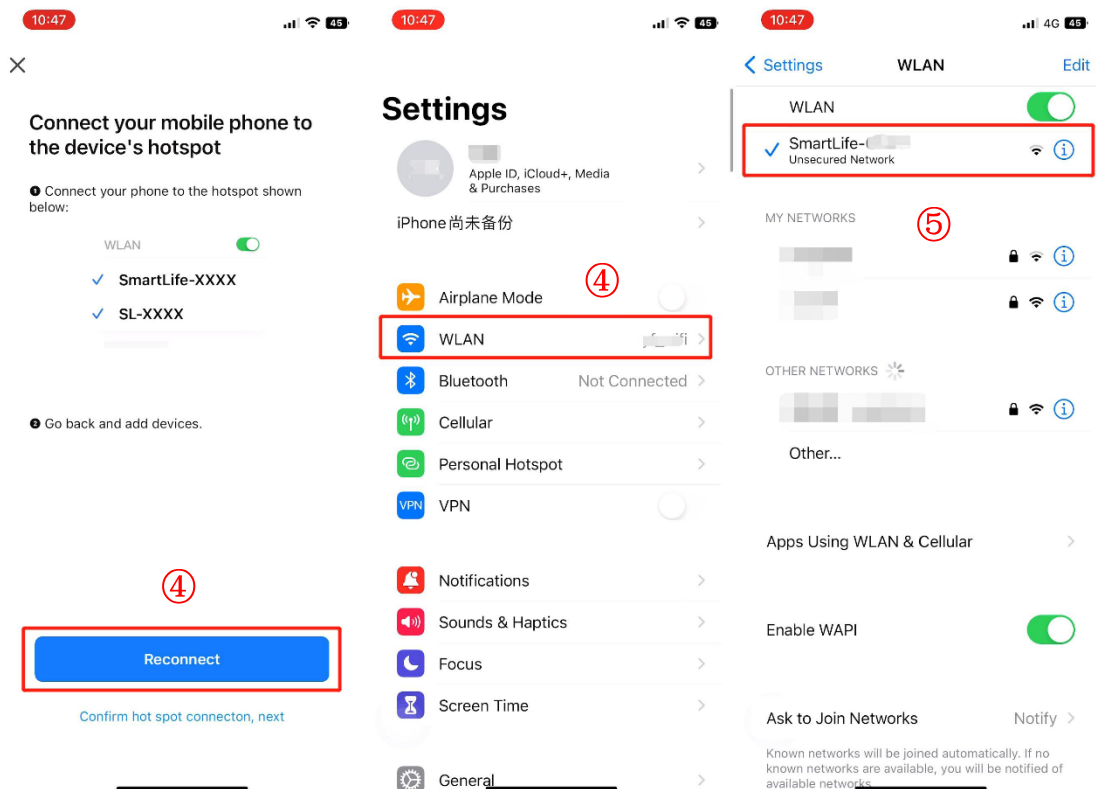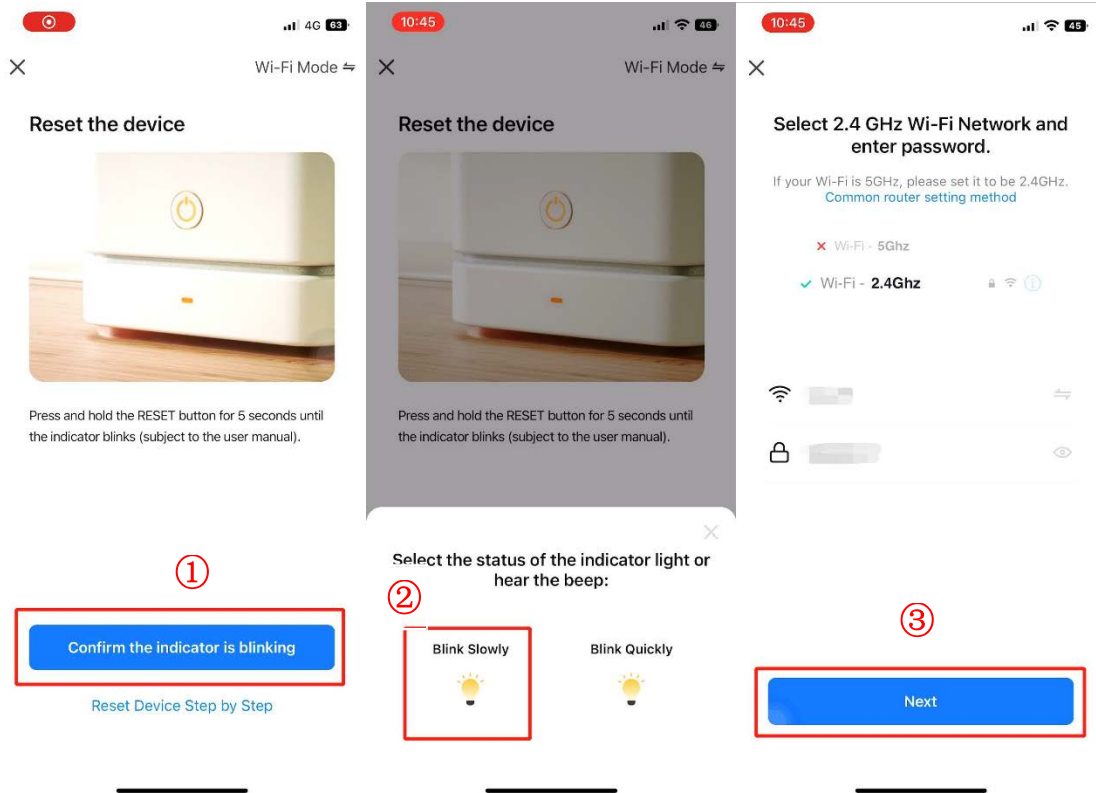




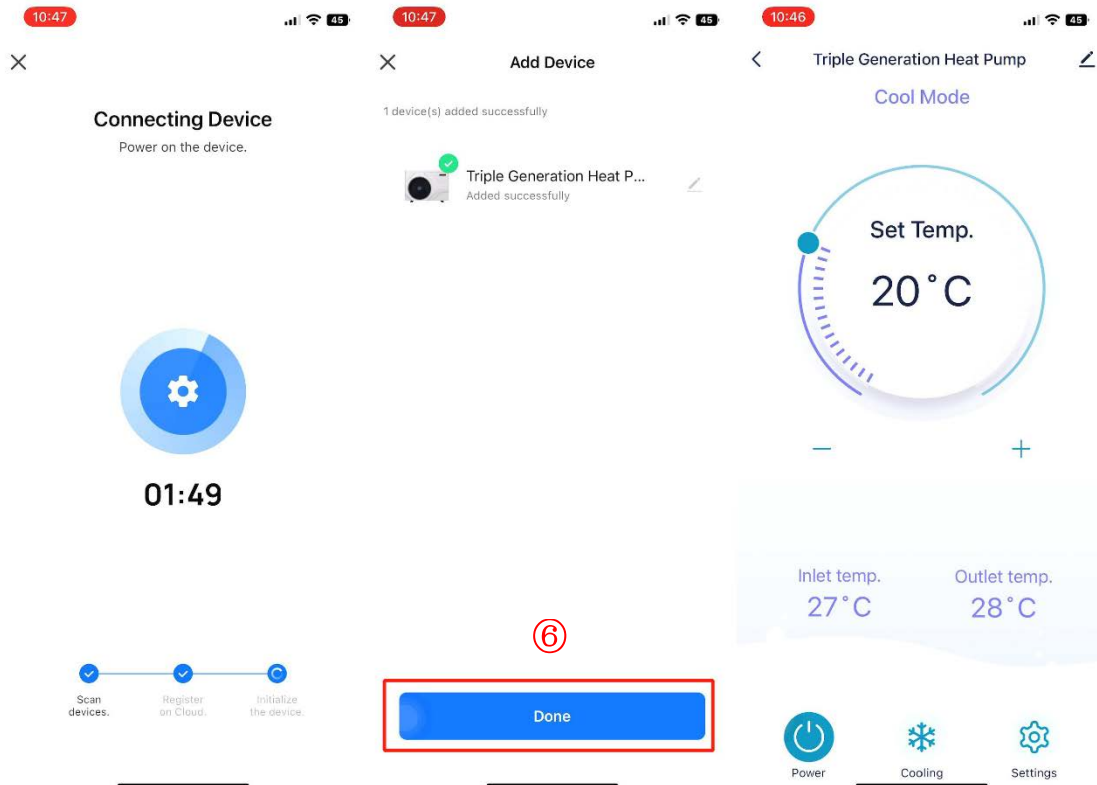


## 6. App function operation


Open the "Smart Life" APP homepage, click your device name in "All Devices" to enter the operation page of changing the device.

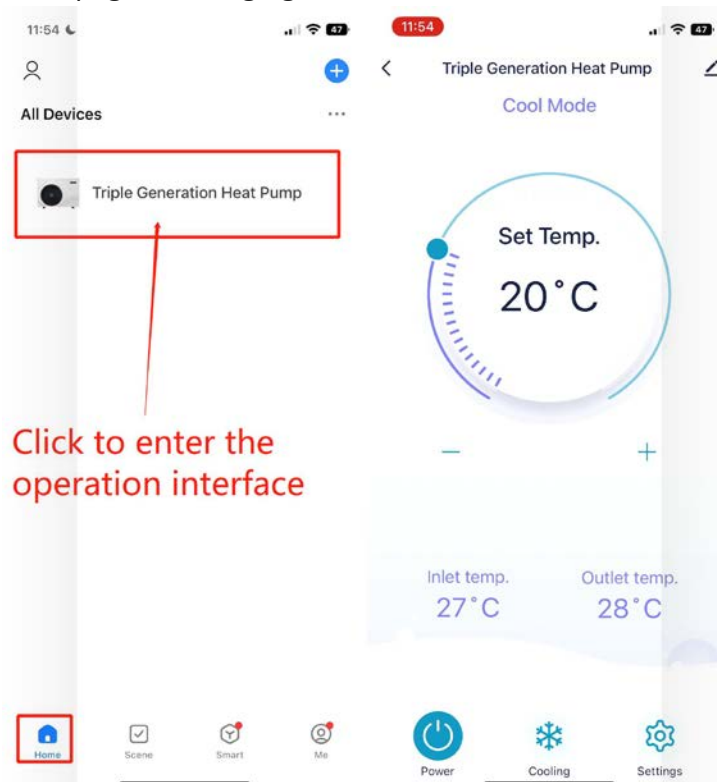


## 7. Operation main interface function introduction

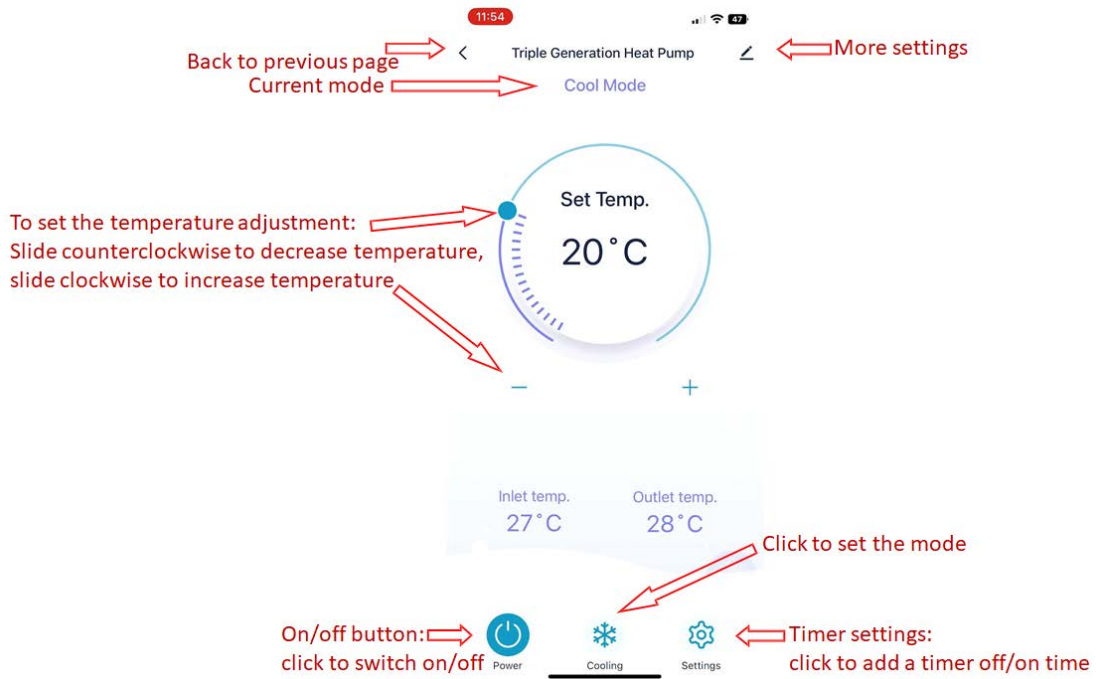

### 7.1. mode setting:

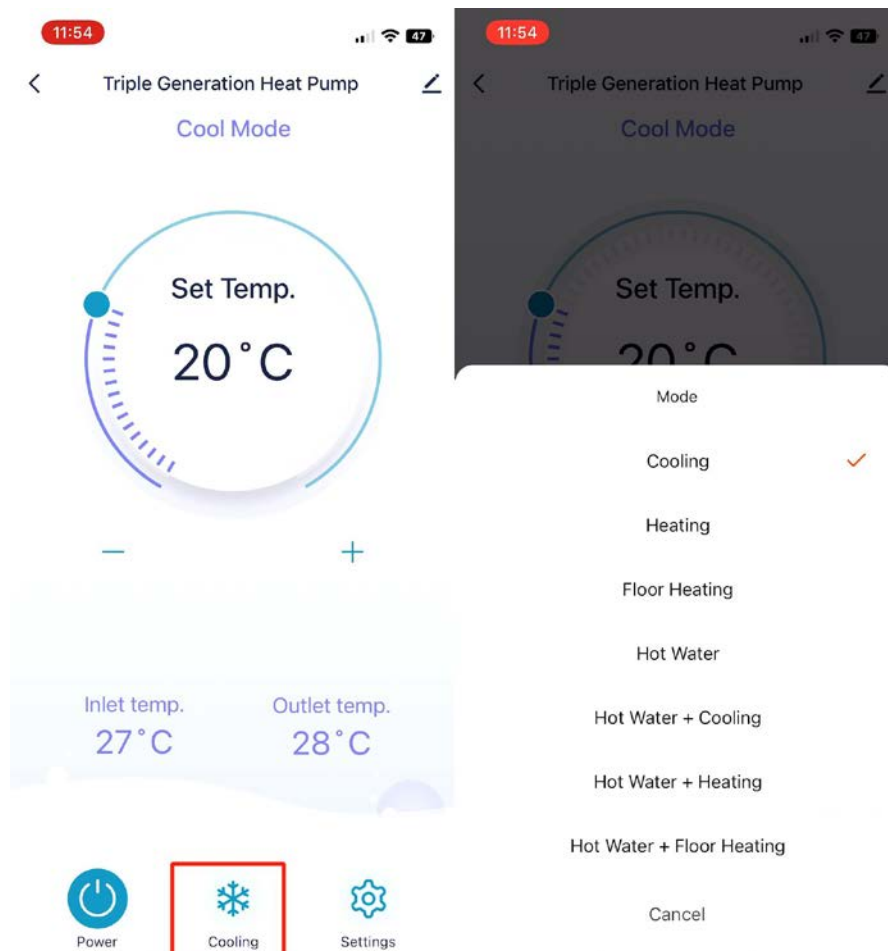


7.2. Timing settings:

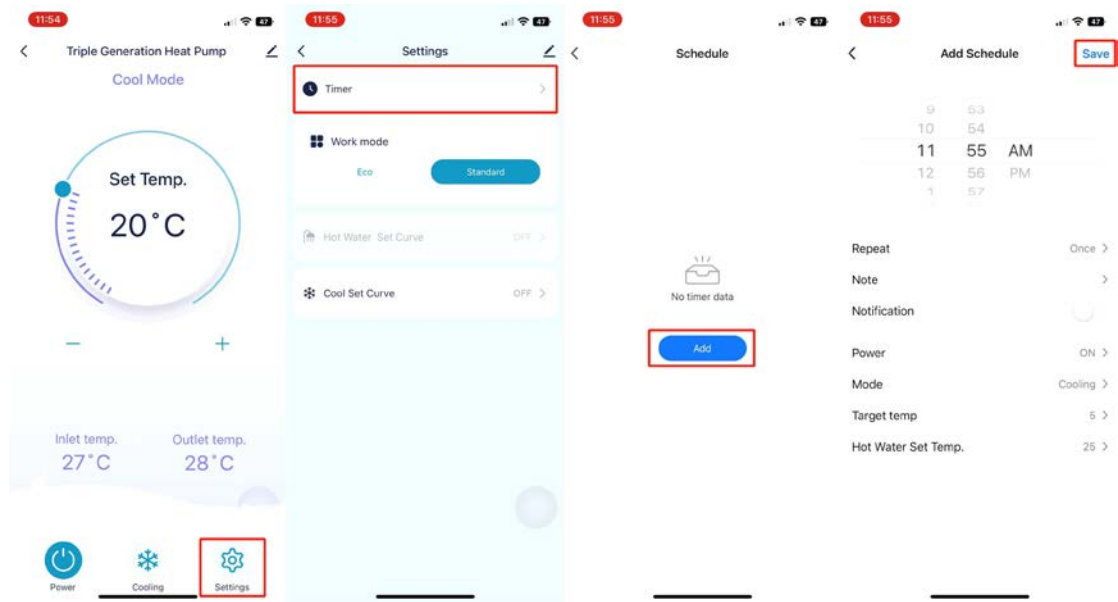


7.3. More settings:

You can change the device name, view device information, select the device installation location, check the network status, add shared devices, create groups, etc.

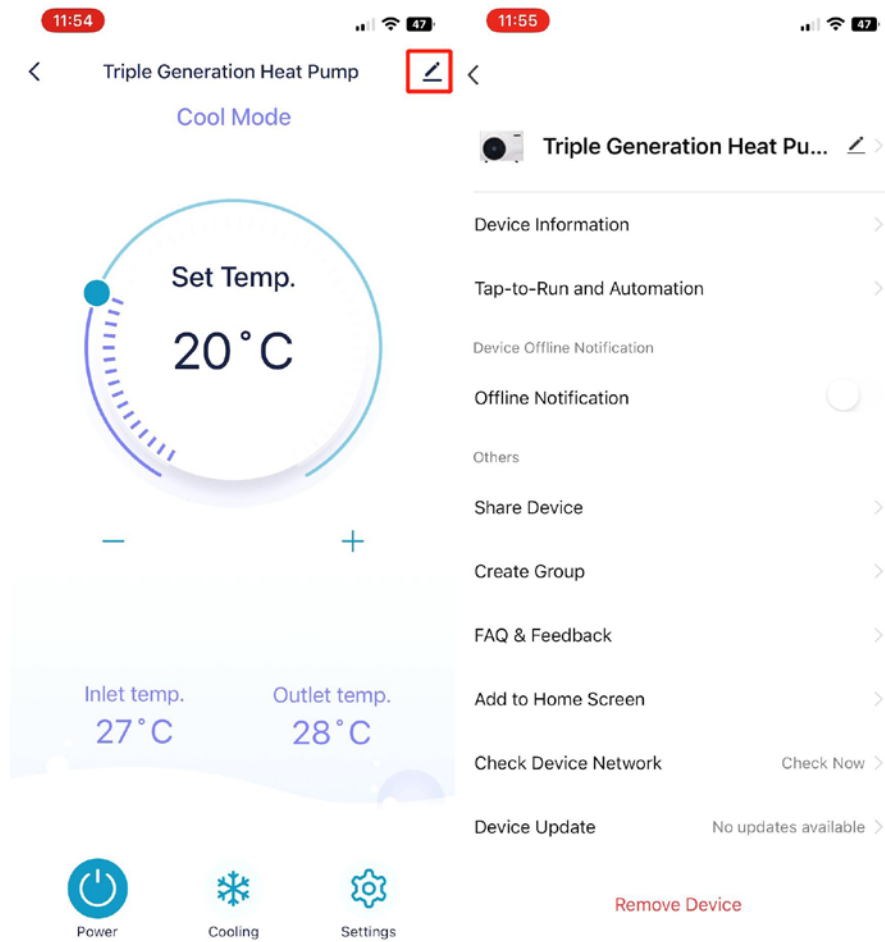

**7.4. Add shared device:**


There are two ways to add a shared device: ① Share it with a smart life account. ② Share to other apps.

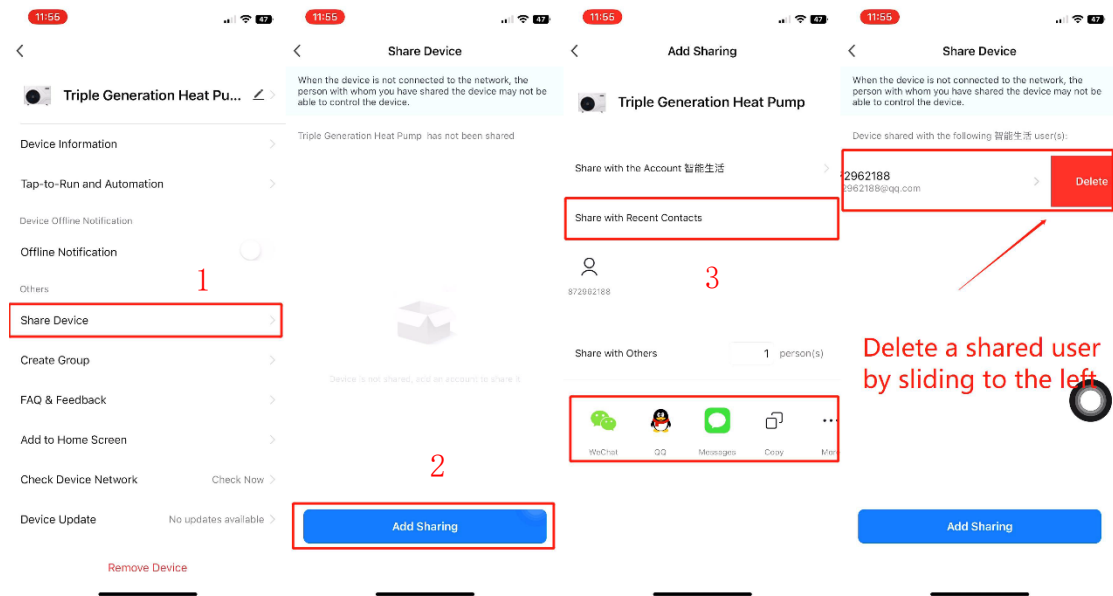


**7.4.1. join shared device:** There are two ways to join a shared device.

**7.4.1.1. Join in Smart Life APP**


After being shared with the smart life account by others, the APP will automatically generate the shared device received, and click to enter the main interface of device operation

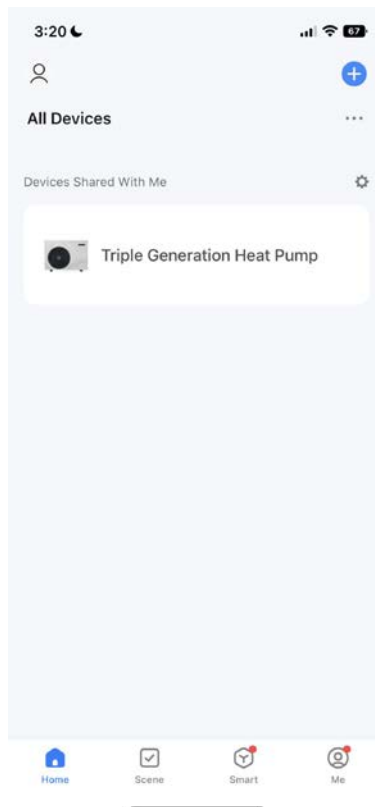

### 7.4.1.2. Add in other apps (Take WeChat as an example)

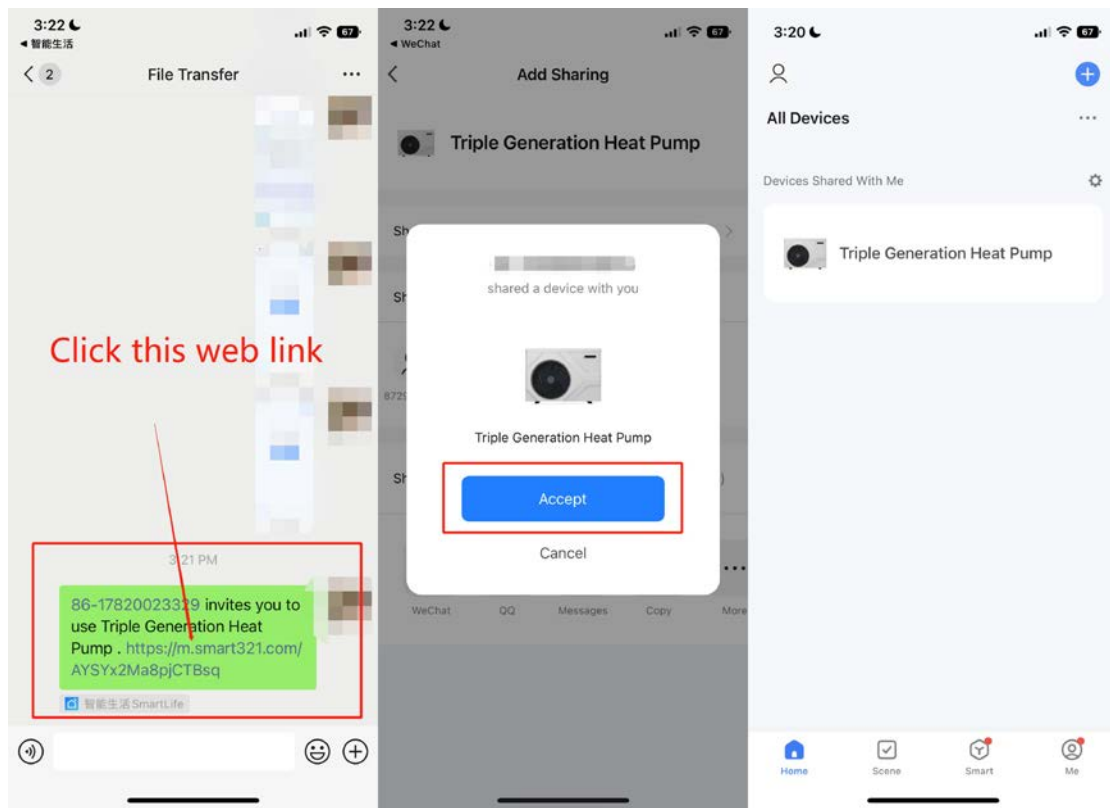

### 7.4.2. Create groups:

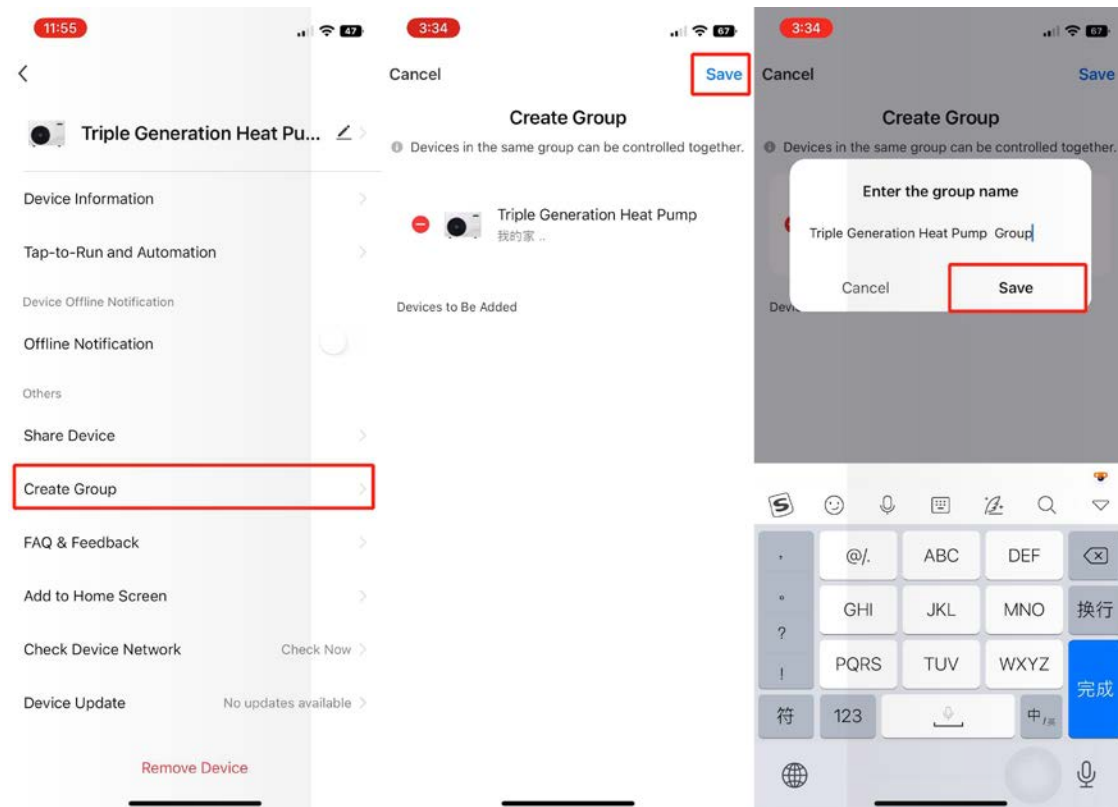

**7.4.3. create a family:** Click on "Me" in the lower right corner of the Smart Life APP. After creating a family, you can choose any room to add equipment.

